


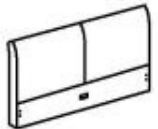

























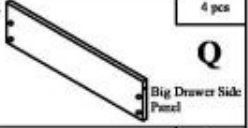















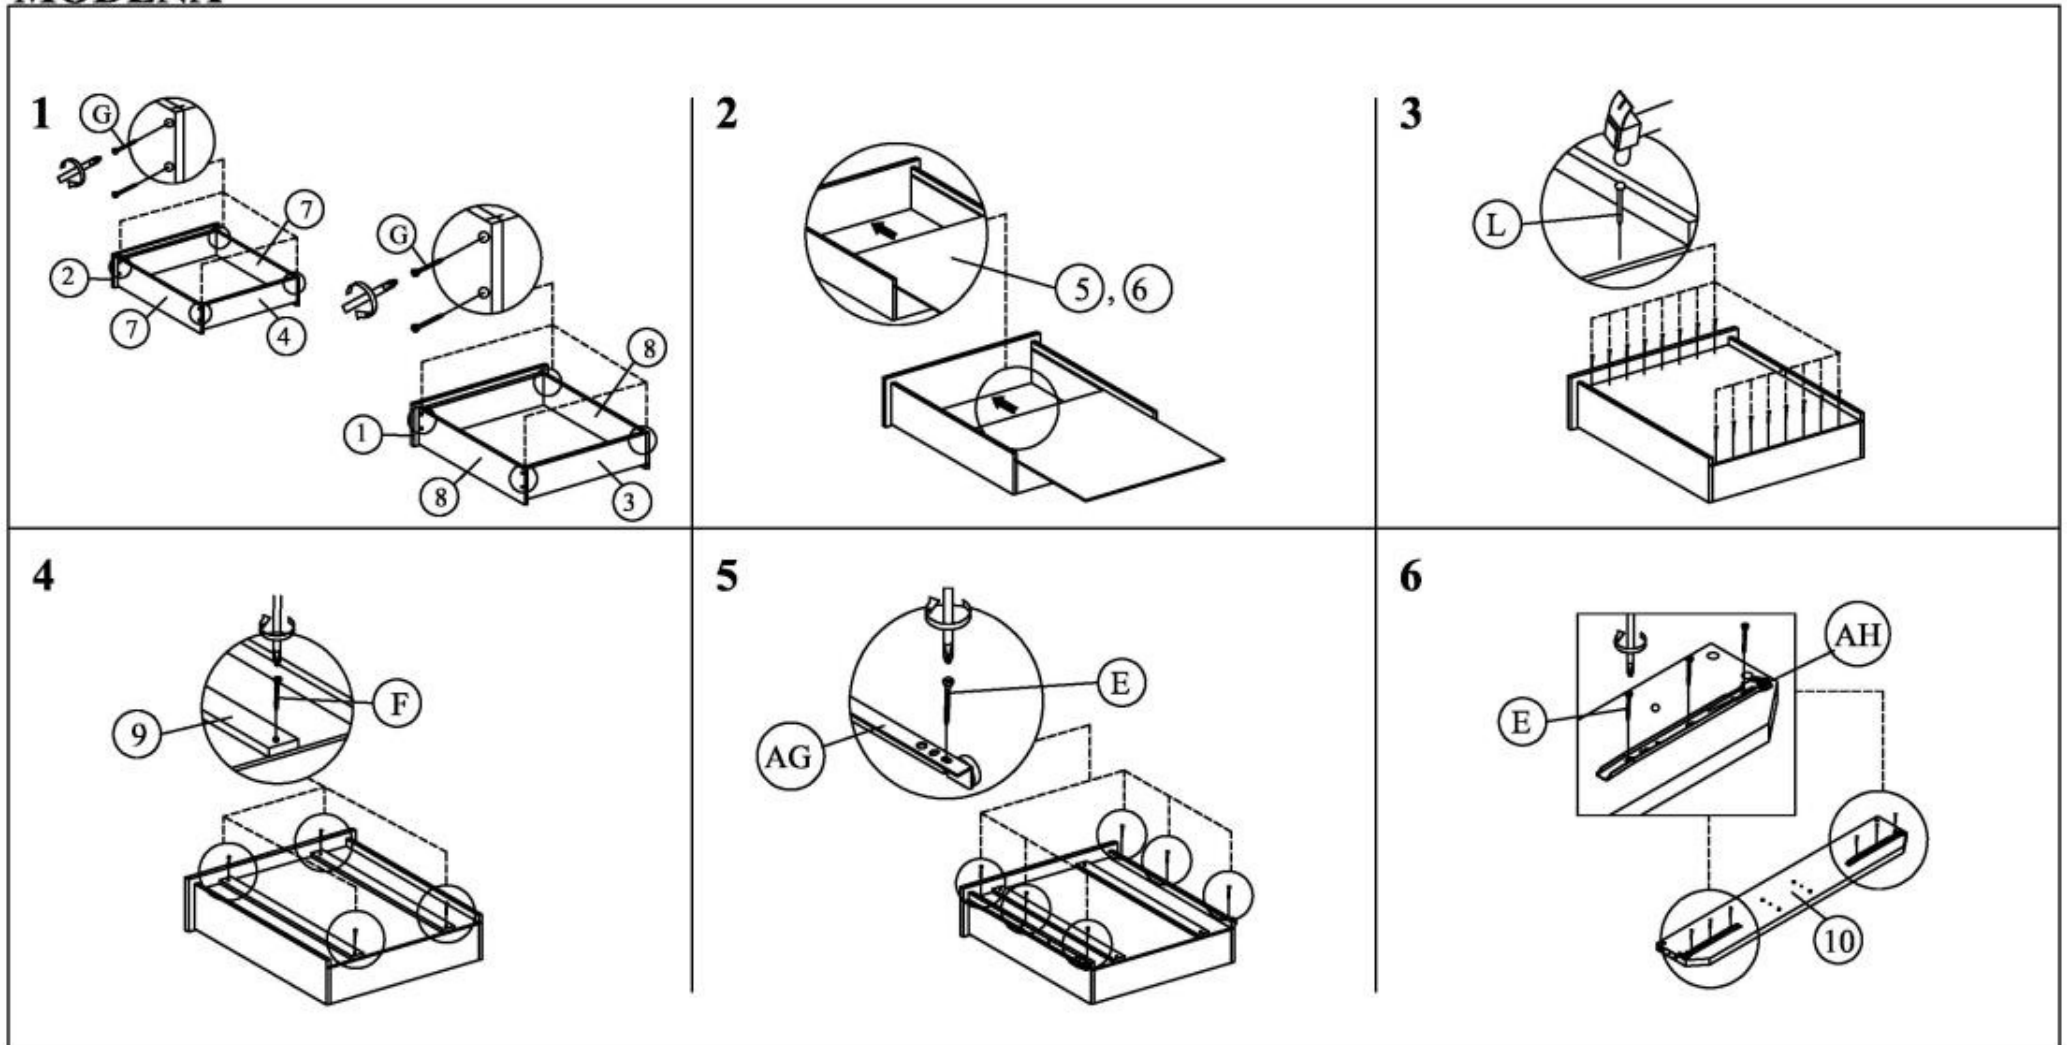


# MODENA


Item AA  <b>A</b> Headboard 1 pc	Item AB  <b>B</b> Footboard 1 pc	Item CL  <b>CL &amp; CR</b> Side Rail 1 pc	Item CR  <b>CR</b> Side Rail 1 pc	Item A  <b>Z2</b> Plastic Dowel ( 8 x 25 ) 31 pcs	Item B  <b>Z3</b> JCBC W M6 x 40 17 pcs	Item C  <b>Z4</b> JCBC M6 x 40 2 pcs
Item AD  <b>D</b> Slat 1 pc	Item AE  <b>E</b> Center Rail 1 pc	Item AF  <b>F</b> Support leg 2 pcs		Item D  <b>Z5</b> JCBC M6 x 60 2 pcs	Item E  <b>Z6</b> CSK M3.5 x 16 mm 52 pcs	Item F  <b>Z7</b> CSK M4 x 32 mm 26 pcs
Item AG  <b>G</b> Drawer Slide 500 8 pcs	Item AH  <b>H</b> Drawer Slide 500 8 pcs	Item AI  <b>I</b> 4 pcs		Item G  <b>Z8</b> CSK M4 x 50mm 40 pcs	Item H  <b>Z9</b> CSK M4 x 25 mm 1 pc	Item I  <b>Z10</b> Mini Fix Bolt 10 pcs
Item 1  <b>J</b> Big Drawer Front Panel 2 pcs	Item 2  <b>K</b> Small Drawer Front Panel 2 pcs	Item 3  <b>L</b> Big Drawer Back Panel 2 pcs	Item 4  <b>M</b> Small Drawer Back Panel 2 pcs	Item J  <b>Z11</b> Mini Fix Housing 10 pcs	Item K  <b>Z12</b> Mini Fix Cap 10 pcs	Item L  <b>Z13</b> Power Nail 5/8 52 pcs
Item 5  <b>N</b> Big Drawer Bottom Panel 2 pcs	Item 6  <b>O</b> Small Drawer Bottom Panel 2 pcs	Item 7  <b>P</b> Small Drawer Side Panel 4 pcs	Item 8  <b>Q</b> Big Drawer Side Panel 4 pcs	Item M  <b>Z14</b> White Nail Leg 16 pcs	Item N  <b>Z15</b> Allen Key 65 mm 1 pc	Item O  <b>Z16</b> M6 Flat Washer 10 pcs
Item 9  <b>R</b> 8 pcs	Item 10  <b>S</b> 1 pc	Item 11  <b>T</b> 1 pc	Item 12  <b>U</b> 2 pcs	Item P  <b>Z17</b> Adjuster 2 pcs	Item Q  <b>Z18</b> JCBC M6 x 30 8 pcs	
Item 13  <b>V</b> 2 pcs	Item 14  <b>W</b> 1 pc	Item 15  <b>X</b> 1 pc	Item 16  <b>M</b> 1 pc			
Item 17  <b>Z</b> 1 pc	Item 18  <b>Z1</b> 1 pc					

# MODENA




# MODENA


7

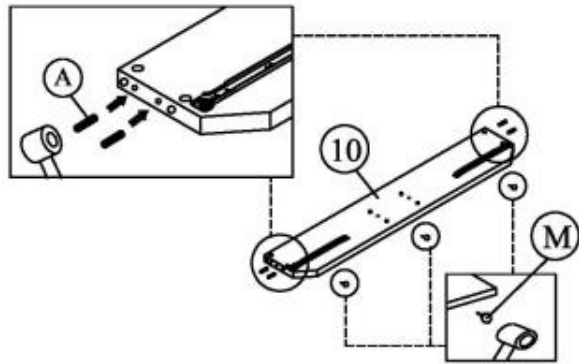


8

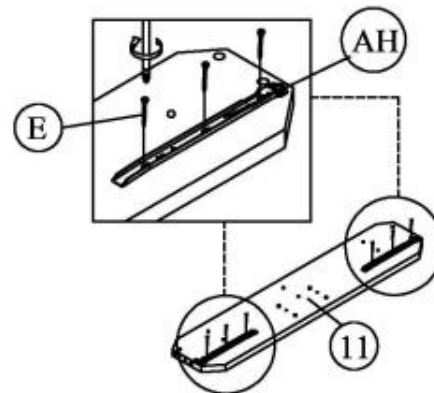


9

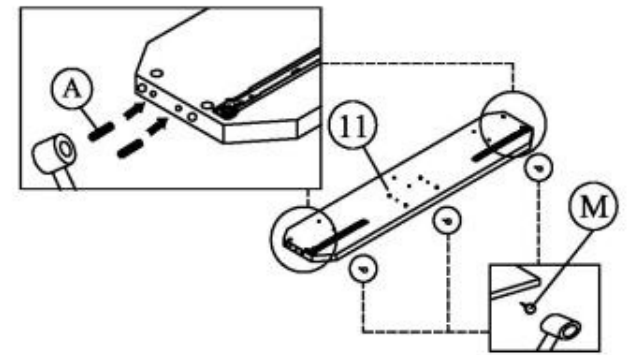


10

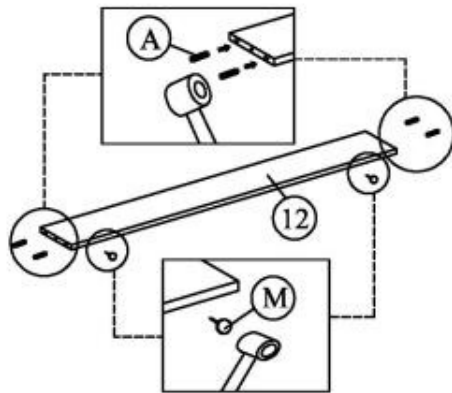

11

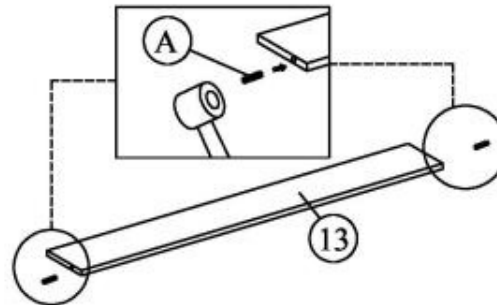


12

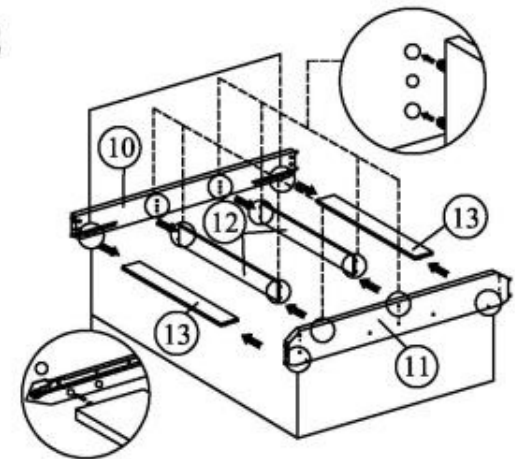


# MODENA


13

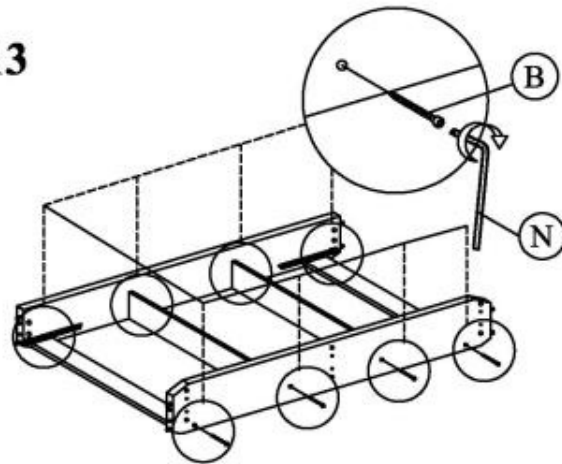

14

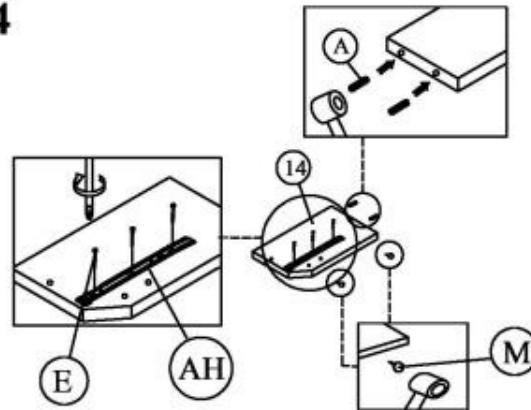


15

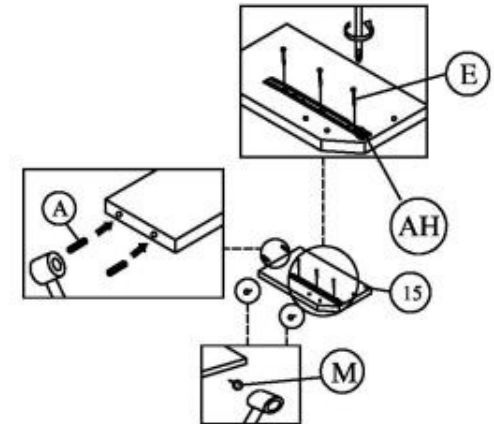


16


Attach (AH) to (16) and tighten it with (D), the flip (AH) to the other side and repeat the same step.

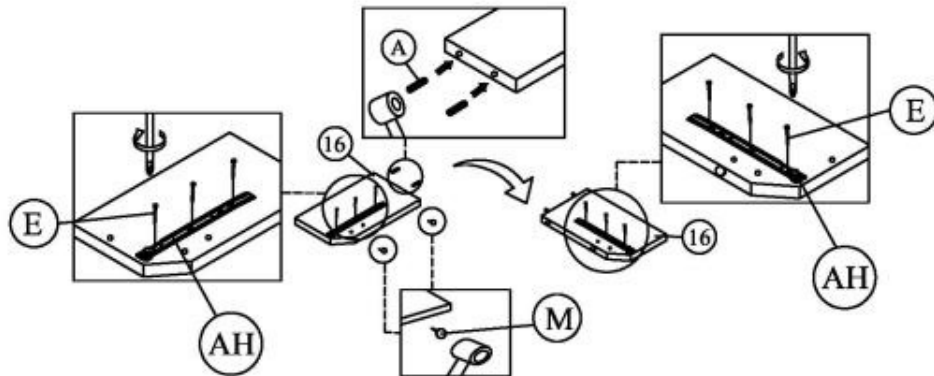

17

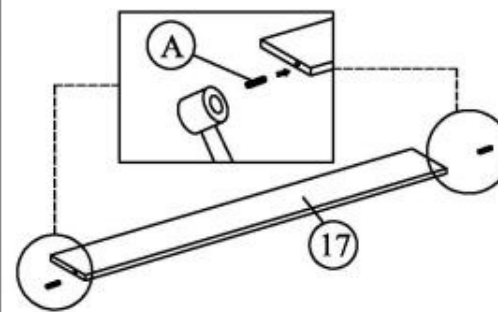


18

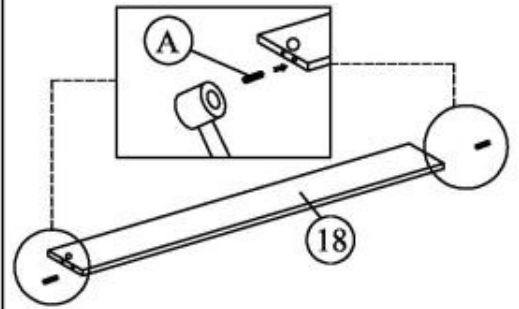


# MODENA


19

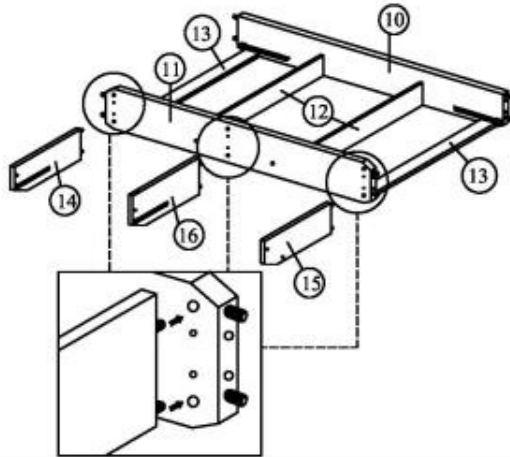


20

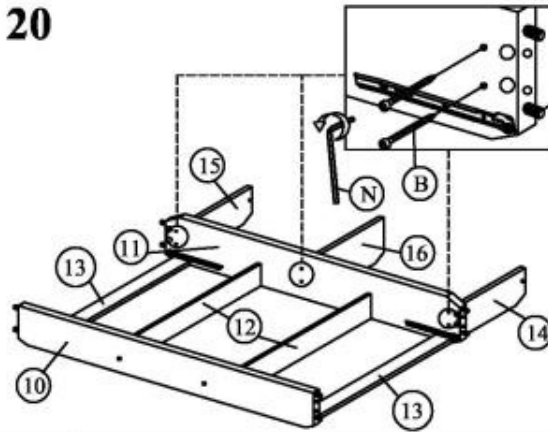


21

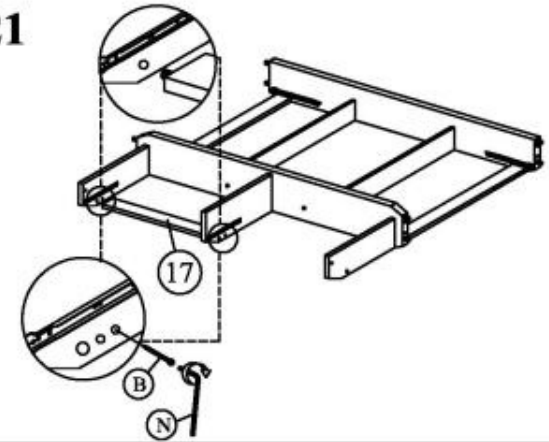


22

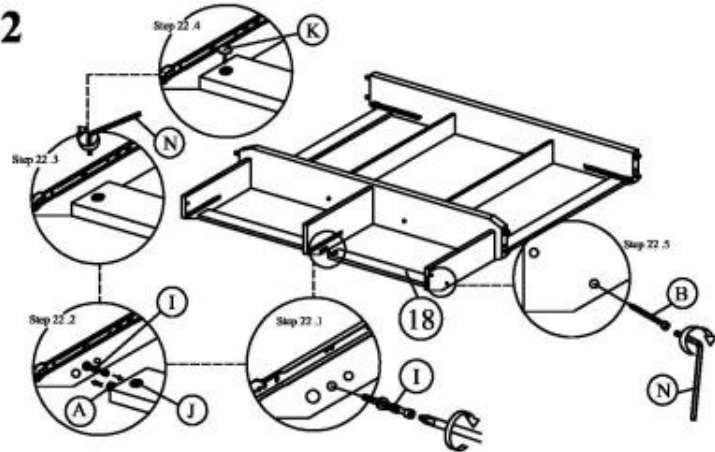

23

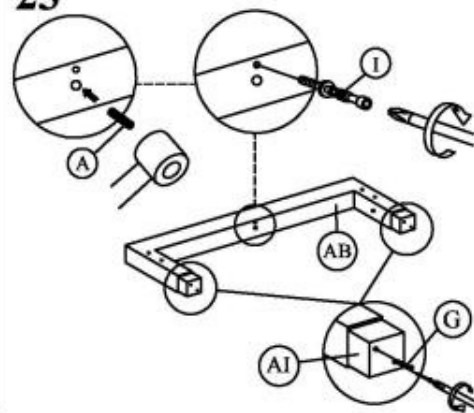


24

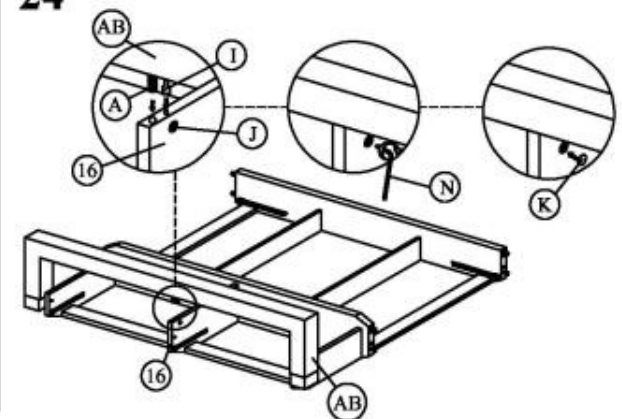


# MODENA


25

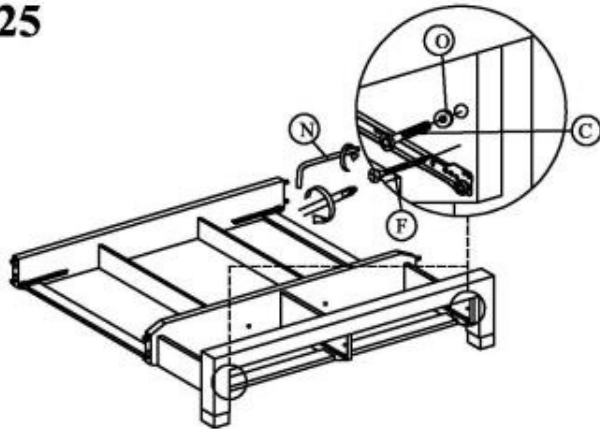


26

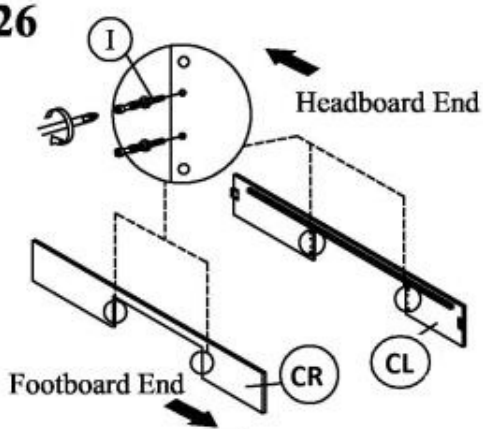


27

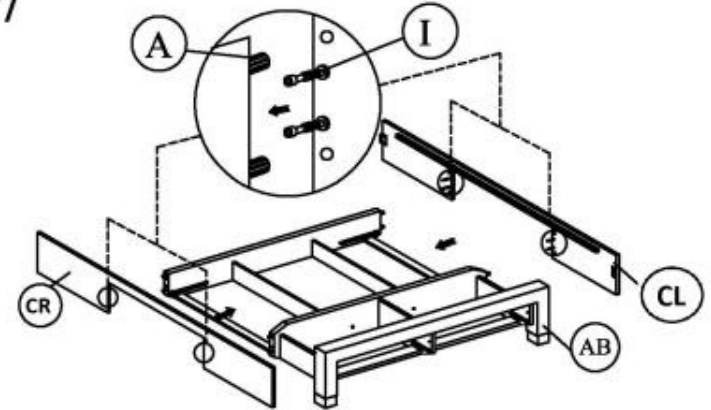

28

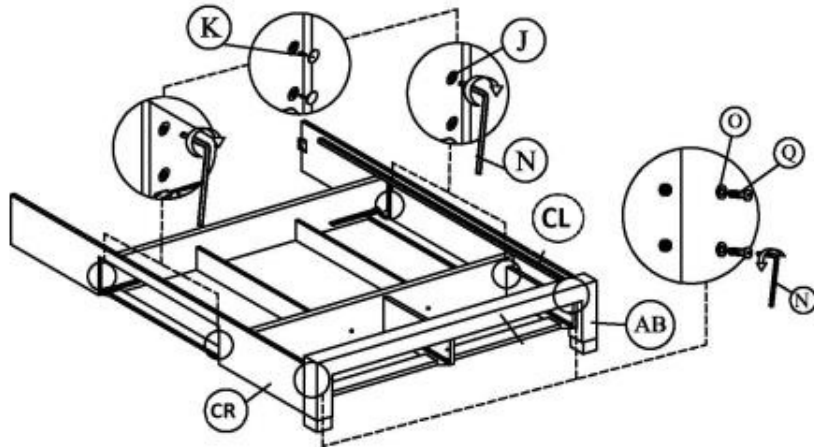


29

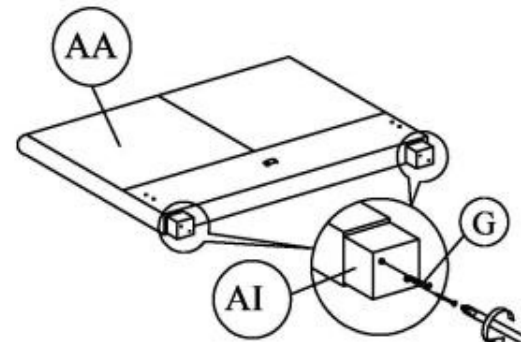


# MODENA


30

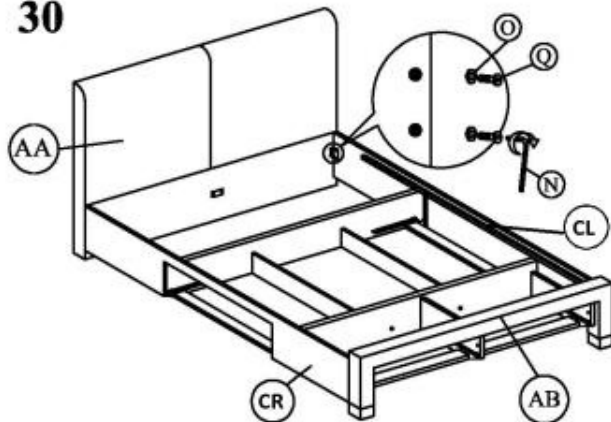


31

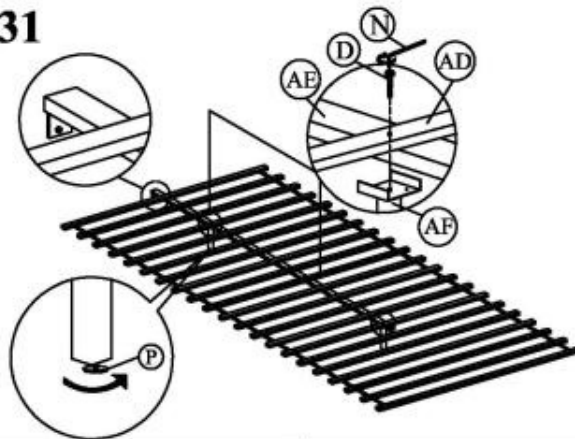

32

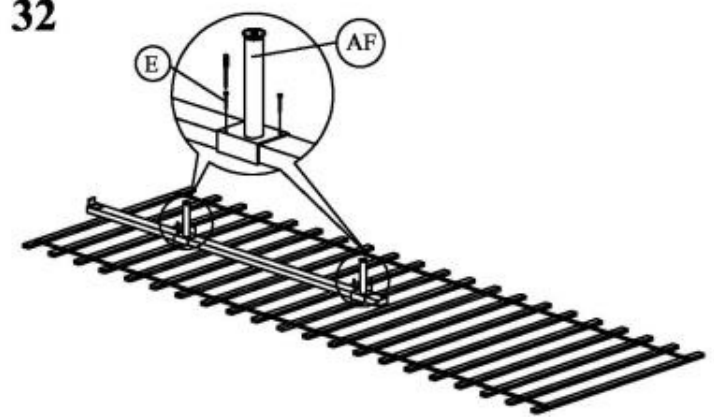

33

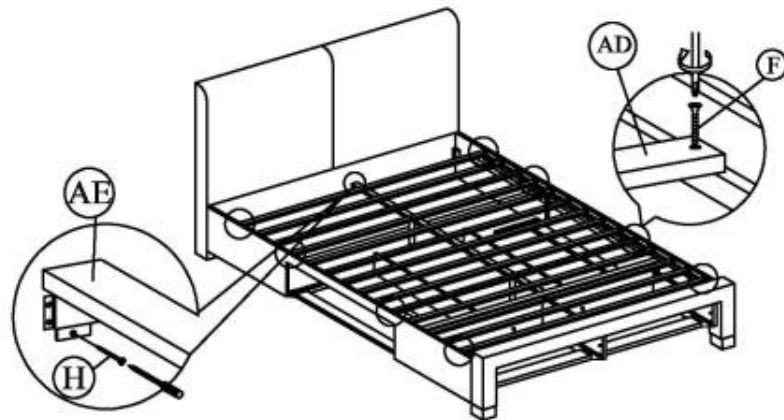

34

